



Yamaha DT-1 - 1969

Note 1
 From Clymer Manual:
 In cases where the battery is chronically undercharged, but otherwise in good condition, it is possible to increase its charging rate. Disconnect the green wire from the magneto where it connects to the green wire in the wiring harness. Then connect the white wire from the magneto to the green wire of the wiring harness.

Drawn by:
 David Shamburg
 dshamburg@comcast.net
 12/7/08