

## SHORT COMMANDS FOR THE VOICE COMMAND SYSTEM\*

With short commands you can carry out certain functions directly, regardless of which menu

item is selected. Here are the important short commands for the voice command system.

### Communication

Function	Command
For additional information, refer to the separate Owner's Manual.	
To open phone	›Phone
To dial phone number	›Dial number
To display phone book	›A to Z
To select from phone book	›Call ... or ›Dial name
To display "Top 8"	›Top 8
Redialing	›Redial
To display "Received calls"	›Received calls
To display "Missed calls"	›Missed calls
To display "Bluetooth"	›Bluetooth
To open "MINI Contact"	›MINI Contact
To open "MINI Contact Numbers"	›MINI Contact numbers
To open "Nearest MINI dealer"	›Nearest MINI Center

### Navigation

Function	Command
To open navigation 101	›Navigation
To display current position 114	›Current position
To open "Enter address" 96	›Enter address
To open "New destination" 96	›New destination

176

Function	Command
To display "Input map" 100	›Input map
To display address book 103	›Address book
To display destination list 102	›Destination list
To switch on destination guidance 107	›Start guidance
To switch off destination guidance 107	›Stop guidance
To display route criteria 105	›Route preference
To switch on voice instructions 110	›Navigation info on
To switch off voice instructions 110	›Navigation info off
To repeat voice instructions 110	›Repeat navigation info
To display arrow view 108	›Arrow display
To display map view 109	›Map, ›Map facing north, ›Map direction of travel or ›Perspective
To open route 105	›Route
To open "New route" 111	›New route
To change scale 109	›Scale ... miles or ›Scale ... feet
To display towns/cities and streets along the route 110	›Route list

### Onboard info

Function	Command
To open "Car Data" 52	›Car data
To display computer 52	›Onboard info
To display trip computer 53	›Trip computer
To open speed limit 62	›Limit

177

Function	Command
To activate speed limit 62	›Limit on
To deactivate speed limit 62	›Limit off
To open stopwatch 63	›Stopwatch

### Entertainment

Function	Command
Tone control 119	›Audio
To switch on radio 121	›Radio on, ›FM on or ›AM on
To open "FM" 121	›FM menu
To open "AM" 121	›AM menu
To open "All stations" 121	›FM all stations
To select radio station 121	›Station ... (e.g. ›Station WNYC) or ›Choose station
To open "Presets" 121	›FM presets or ›AM presets
To select preset radio station 121	›Preset ... e.g. ›Preset 1
To open "Manual" 122	›FM manual or ›AM manual or ›Choose frequency or ›Frequency ... Megahertz
To open strongest radio station 122	›AM Autostore
To open "SAT" 126	›SAT radio menu
To switch on satellite radio 126	›SAT radio
To open "Presets" of the satellite radio 128	›SAT radio presets
To open "All channels" of the satellite radio 127	›SAT radio all channels
To open "Categories" of the satellite radio 127	›SAT radio categories
To open CD player 129	›CD menu

178

Function	Command
To switch on CD player 129	›CD
To open CD changer 129	›CD changer menu
To switch on CD changer 129	›CD changer
To select CD 129	›CD 1...6
To select track 130	›CD track ...
To select CD and track 130	›CD 1...6 track ...
To open DVD 129	›DVD player menu
To switch on DVD 129	›DVD player
To select DVD track 130	›DVD track ...
To start sound output for external audio device 135	›Audio Aux

### Setup

Function	Command
To open setup	›Settings menu
"Display off" 20	›Display off
To open "Info sources"	›Info sources
To open "Settings"	›Settings
To open "Door locks" 27, 29	›Door locks
To open "Lighting" 46	›Lighting
To open "Service requirements" 56	›Service requirements
To open "Service" 56	›Service
To display "Check Control messages" 60	›Check Control messages
To activate speed limit 62	›Limit on
To deactivate speed limit 62	›Limit off
To set brightness of Control Display 64	›Brightness
To open "Units" 50	›Units

179

Function	Command
To open "Languages" 63, 110	›Language‹
To open "Time" 58	›Time‹
To open "Date" 59	›Date‹
To open "PDC" 65	›PDC‹
To open "FTM" 68	›FTM‹
To display "Bluetooth"	›Bluetooth‹