


Portable Quick-Jacks

March 4, 2006 — Compliments of Keith Crowe – 93-GL1500-I


Place the bike on the Center Stand, attach the two Quick-Jacks to the upper bar of the engine guards, hook a 24" bungy cord to the lower end of the Quick-Jacks (just above the PVC caps). While grasping the passenger backrest, push down on the rear of the Trunk (raising the front end of the bike), the Quick-Jacks should be drawn against the lower bar of the engine guards and support the front wheel of the bike off the ground. To remove the Quick-Jacks, release the bungy cord and push down on the Trunk once again. The attached spring will push the Quick-Jacks to side and clear of the floor. Quick-Jacks will fit inside the saddlebags without taking up too much space. Great for not only maintenance at home, but emergency work on the road.

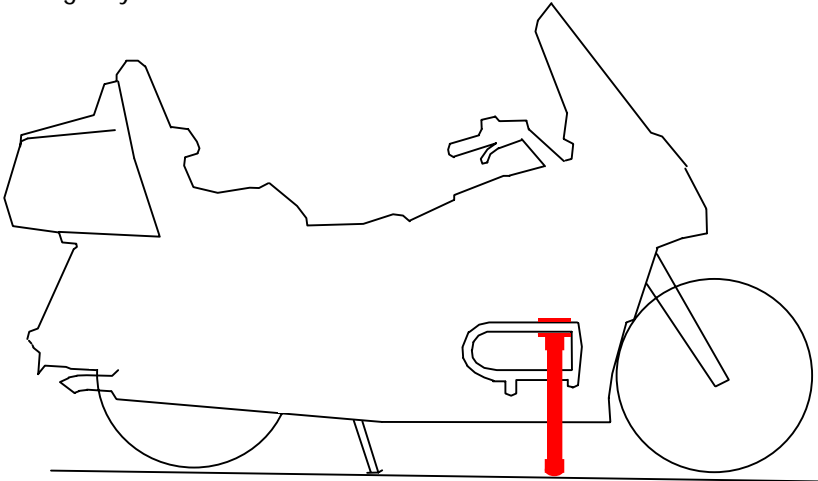

PVC "T" (1" x 3/4")
with a cutout to fit
around the 1" diam.
engine guard

3/4" X 20 1/4"
PVC (thick wall)

3/4" PVC Cap

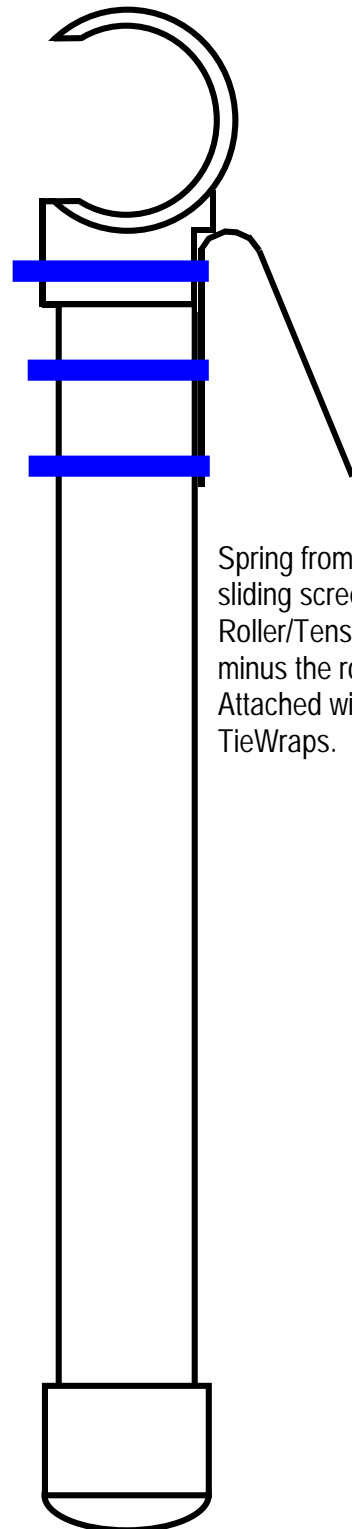

Spring from a
sliding screen door
Roller/Tensioner,
minus the rollers.
Attached with Nylon
TieWraps.