




1. Lay Battic Door flat - printed side down.

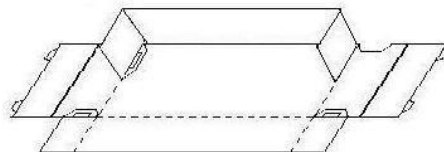


2. Fold one side up and turn end flaps in.




3. Fold other side up and tuck end flaps in.




4. Fold one end up and over. Tuck self-locking tabs into slots.

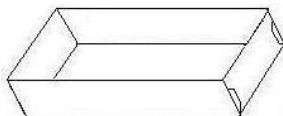

5. Fold other end up and over. Tuck self-locking tabs into slots.

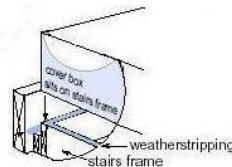

6. Apply weatherstripping to the stairs frame.

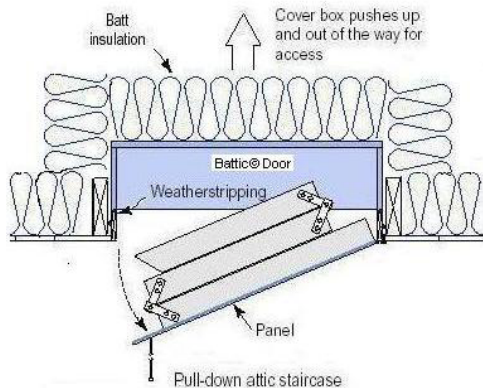

7. Rest the Battic Door on the weatherstripping as you leave the attic.

Quick and Easy Installation Instructions:

Step 1: Fold the stairway cover into shape. Self-locking tabs securely lock the ends of the cover into place.

Step 2: Apply the foam weatherstripping provided to the top of the folding attic stairway frame.

To close: Simply lower the Battic® Door onto the weatherstripping as you leave the attic. The Battic® Door embeds itself into the weatherstripping, creating a tight seal.

To open: Simply lift cover up and place out of the way.

Tip: If desired, cover the Battic Door with insulation to increase its insulating value to the level desired. Fiberglass batts or rigid insulation boards may be glued to the exterior of the Battic Door.

Manufactured and Distributed by:

Battic Door
P.O. Box 15
Mansfield, MA 02048-0015 U.S.A.



stops air drafts saving you energy \$\$\$!
reflective shield installs in minutes!
THE ATTIC DOOR COVER THAT PUTS THE LID ON AIR LEAKS

web: www.batticdoor.com
email: info@batticdoor.com