

# Mojoblock Installation Manual


**scratch-resistant, oversize jaw inserts for the  
Harbor Freight motorcycle tire-changing  
stand**




**DISCLAIMER: By using this product, you assume all risk and responsibility for any injuries to yourself or others, related to your use or misuse of this equipment. You also agree to release and discharge any and all liability and claims against the manufacturer for any damages or injury of any kind.**

**For best results, remove the three rim-grabbing jaws from the stand before starting.**

1. Using a pencil or scribe, mark a single point on top of each jaw, 1/2 inch inward from the hook, and 1/2 inch from either side. Use a hammer and center punch to make a divot at this location; this will prevent the drill bit from wandering when starting the hole.

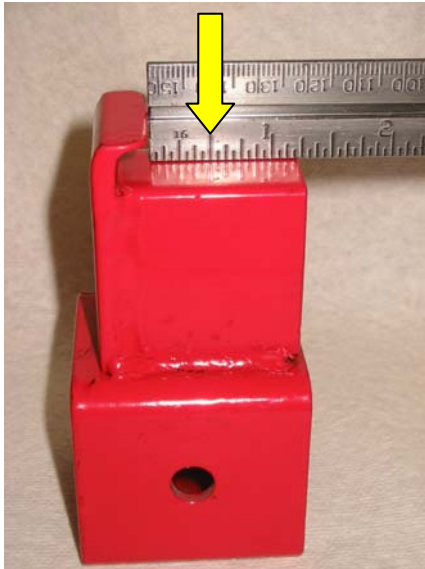

2. Drill a small (1/8" or 3/16") hole at the location on each jaw marked in step 1. Using this small hole as a pilot, drill a 5/16" hole.

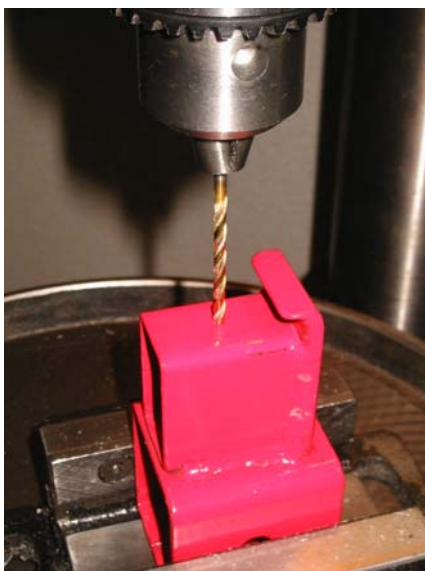

4. Attach a Mojoblock to the top of each jaw as shown, using one screw, one washer, and one nylon-insert nut for each Mojoblock. **Do not overtighten the screw, it will split the plastic!**



5. Reinstall the jaws on the tire-changing stand.