


# USDM to JDM Antenna Swap

---

First thing that we need to cover is the wiring of both models, first the antenna:

Antenna Harness	Purpose
Yellow / White	Antenna Up/Down
Black	Ground
White / Yellow	12v from fuse box
Green / Red (JDM Only)	½ Way Control

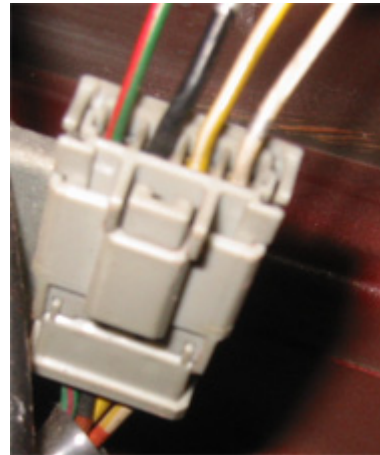


So now that we understand how the antenna is wired, you need to pick your route (maybe depending upon if you have the parts, none the less) for installation.

## Installation with a Switch

Ok so first off let's discuss how the switch is wired. In the table below I have put the wire colors in the same spots in the table as they should be wired on the switch:

- Empty -	<b>Yellow / White</b>
<b>Black</b>	( No pins here Clip on the right )
- Empty -	
<b>Green / Red</b>	- Empty -

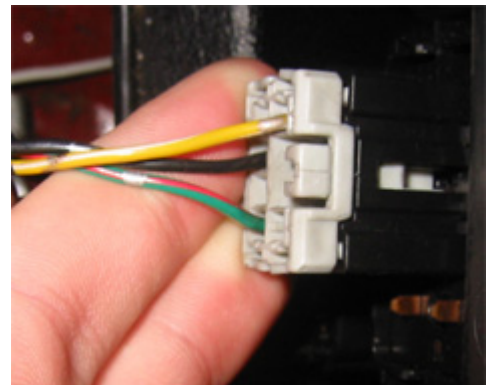

So of course to start out you need to take the Green / Red wire from the antenna harness to the Green / Red wire or pin for this wire on the switch. Next you take the Black wire and attach a wire to it and then the other side of the wire you ground to the body, i.e. a bolt that goes through metal is fine. Then if you want the little LED in the switch to light up, then you need to run a wire from the Yellow / White on the radio harness to the Yellow / White on the switch or pin for this wire. Now you may have to splice wires on the USDM antenna harness to the JDM antenna harness, but it's simple. Just match the colors accept for the Green / Red which you will run a separate wire up to the switch and connect to the Green / Red on the switch. Put it all back together and go brag to your friends about your JDM antenna.

## **Installation without a Switch**

This installation is simple if you don't have a switch or would not like to install one. All you have to do is splice the wires from the USDAM harness to the JDM harness by matching the colors. You will notice that you have a Green / Red wire that is not connected to anything. Just splice this wire into the Black wire on the JDM harness and your antenna will go up full mast every time.

\* This option eliminates the ½ mast option and makes your antenna only go all the way up and down.

## **Antenna Installation**

Umm ... Unscrew the cap on the outside top of the antenna and pull out holder and then there is one bolt in the trunk. Easy enough?

Any questions about this write up just send Qveon a message.