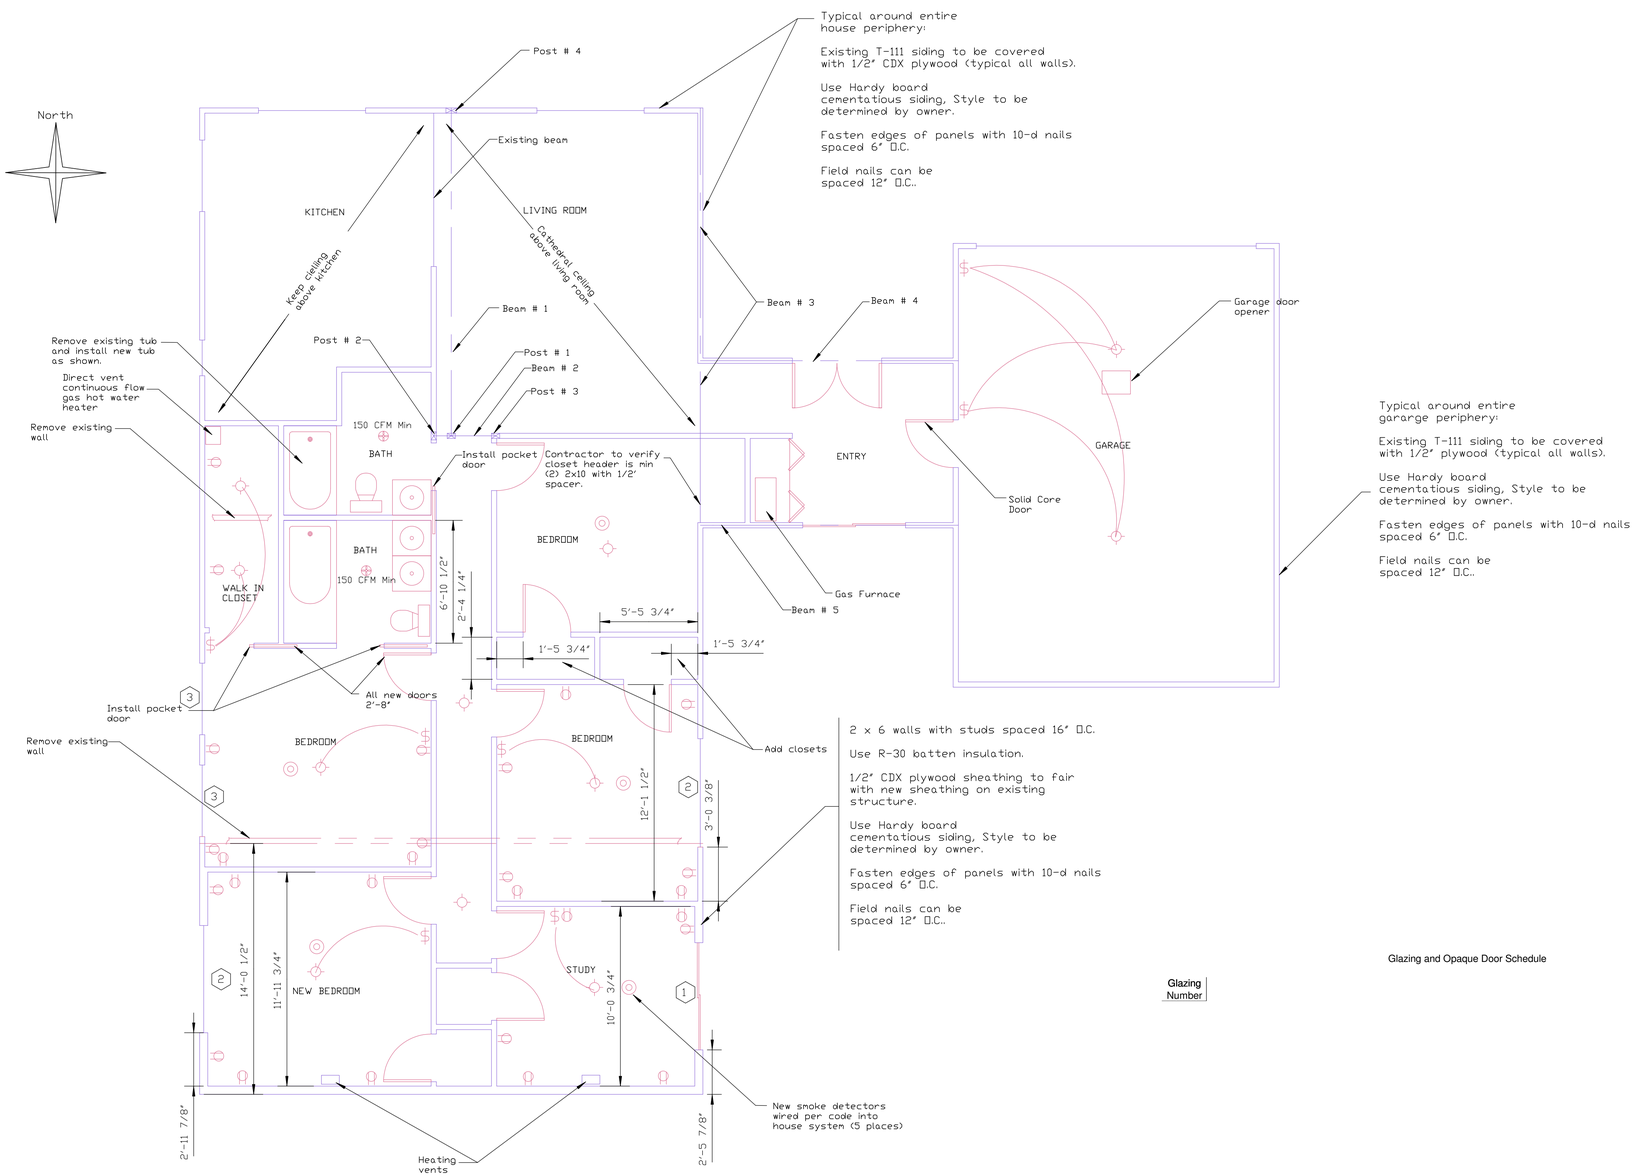

Typical around entire house periphery:

Existing T-111 siding to be covered with 1/2" CDX plywood (typical all walls).

Use Hardy board cementatious siding, Style to be determined by owner.

Fasten edges of panels with 10-d nails spaced 6" O.C.

Field nails can be spaced 12" O.C..

Typical around entire gararge periphery:

Existing T-111 siding to be covered with 1/2" plywood (typical all walls).

Use Hardy board cementatious siding, Style to be determined by owner.

Fasten edges of panels with 10-d nails spaced 6" O.C.

Field nails can be spaced 12" O.C..

2 x 6 walls with studs spaced 16" O.C.

Use R-30 batten insulation.

1/2" CDX plywood sheathing to fair with new sheathing on existing structure.

Use Hardy board cementatious siding, Style to be determined by owner.

Fasten edges of panels with 10-d nails spaced 6" O.C.

Field nails can be spaced 12" O.C..

Glazing and Opaque Door Schedule

Glazing Number

Floor plan

Scale 1/4" = 1'

FLOOR PLAN

DATE: 4/21/2008	
REVISION:	New

A-3